

Part Number: PT747-35201-02

### Kit Contents

Item #	Quantity Req'd.	Description
1	1	Protector, Front Door Sill - RH
2	1	Protector, Rear Door Sill - RH
3	1	Protector, Front Door Sill - LH
4	1	Protector, Rear Door Sill - LH

### Hardware Bag Contents

Item #	Quantity Req'd.	Description
1		

### Additional Items Required For Installation

Item #	Quantity Req'd.	Description
1		

### Conflicts

C-Cab Tacoma Models
---------------------

### Recommended Tools

Personal & Vehicle Protection	Notes
None	
Special Tools	Notes
Squeegee	Felt Block (3M) P/N 71606
Surface Thermometer	Infrared Non-contact
Heat Gun	Master Heat Gun HG-301A or equivalent
Installation Tools	Notes
Lint Free Rags	
Special Chemicals	Notes
Cleaner	VDC approved cleaner and cleaning method

### General Applicability

MY20 and newer Tacoma models (w/ D-Cab)
---

### Recommended Sequence of Application

Item #	Accessory
1	

\*Mandatory

### Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Req'd.	Description
1		

### Legend



**STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.



**OPERATOR SAFETY:** Use caution to avoid risk of injury.



**CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



**TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.



**REVISION MARK:** This mark highlights a change in installation with respect to previous issue.




**SAFETY TORQUE:** This mark indicates that torque is related to safety.



**REGULATORY MARK:** This mark indicates the component is related to regulatory compliance



FRONT SILL RH

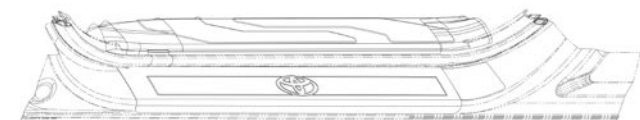

REAR SILL RH


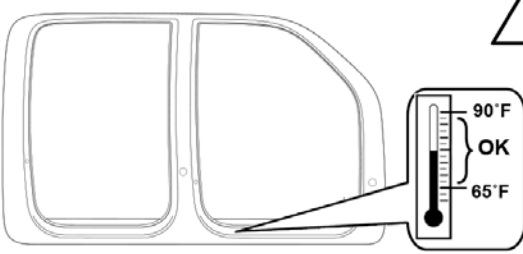

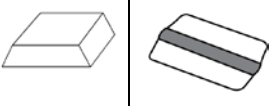





Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.


This document covers such items as: -

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.


 <p><b>STORAGE</b></p>	 <p><b>INSTALLATION TEMPERATURE</b></p>	 <p><b>CLEANER</b></p>  <p><b>FELT BLOCK</b>      <b>SQUEEGEE (OPTIONAL)</b></p>	 <p><b>LINT FREE</b></p>
 <p><b>FRONT DOOR SILL PROTECTOR RH</b></p>		 <p><b>REAR DOOR SILL PROTECTOR RH</b></p>	
 <p><b>FRONT DOOR SILL PROTECTOR LH</b></p>		 <p><b>REAR DOOR SILL PROTECTOR LH</b></p>	

**1**

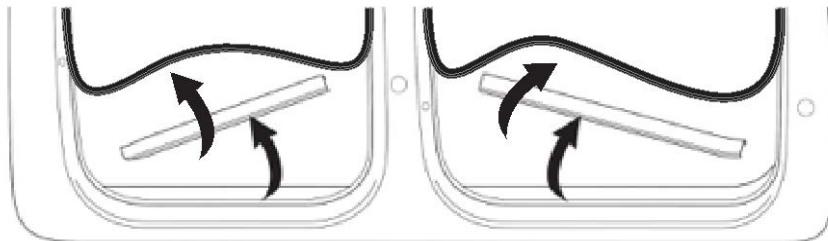


Removal of Door Scuff Plates and Weather-strip

**2**

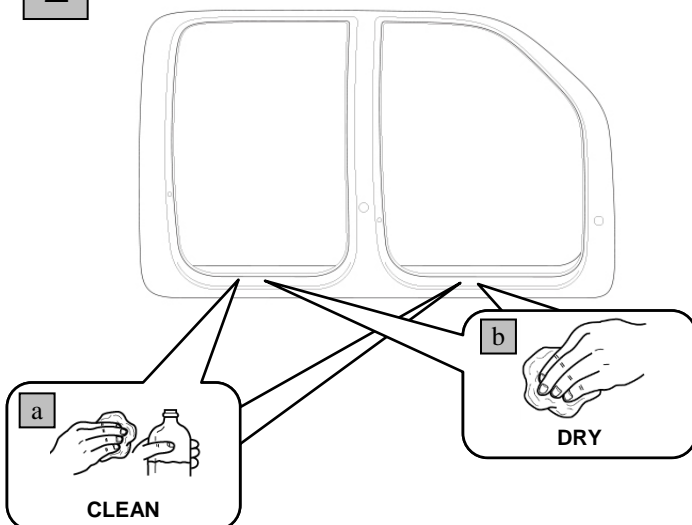


**3**

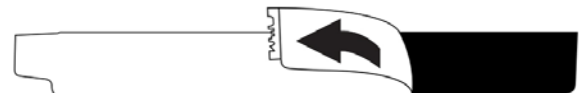


REMOVE LINER


4

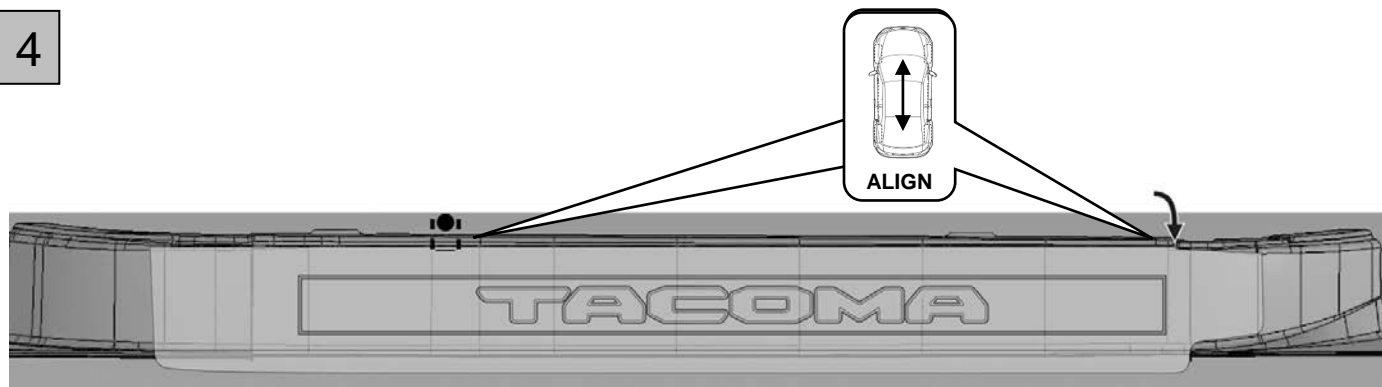


5

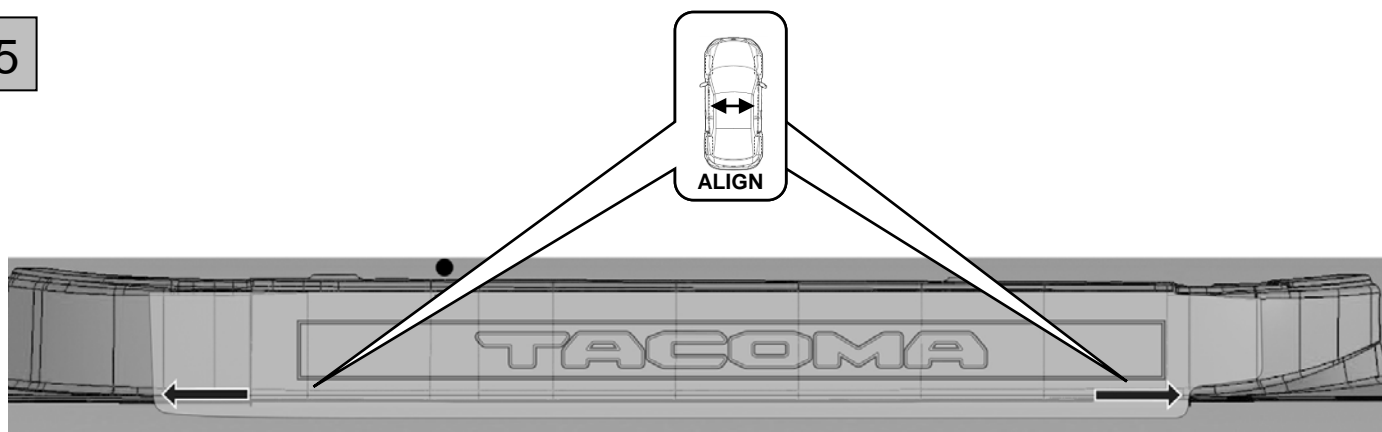

6

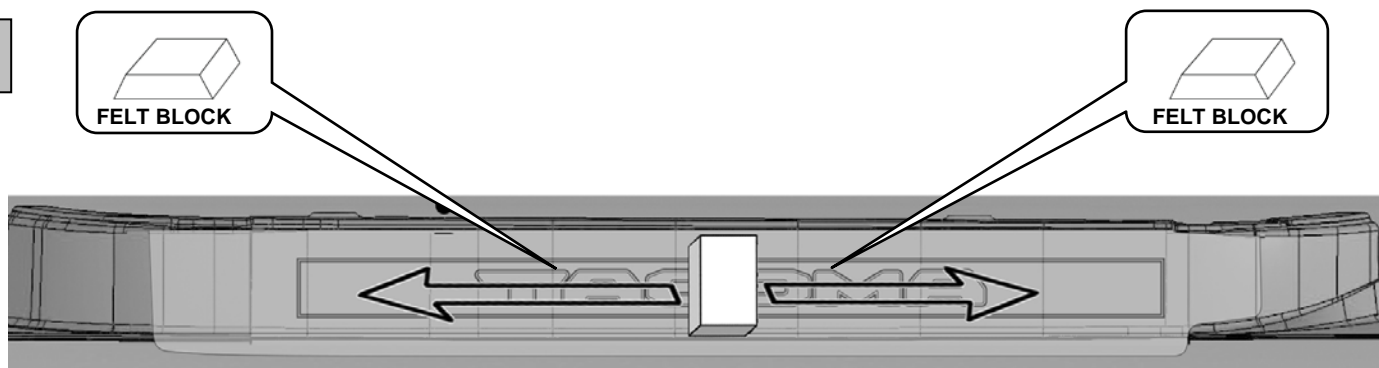

7

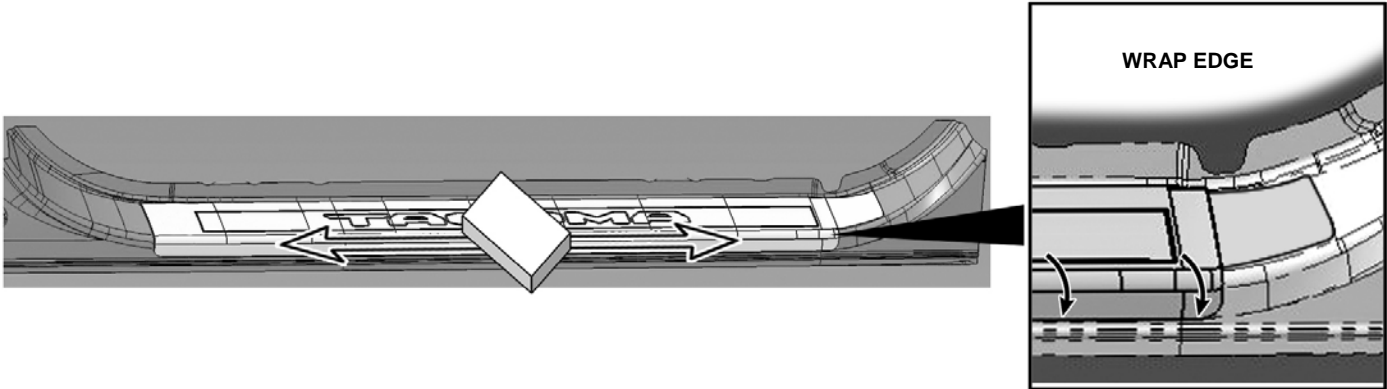

8




Rear Sill




REMOVE LINER


9

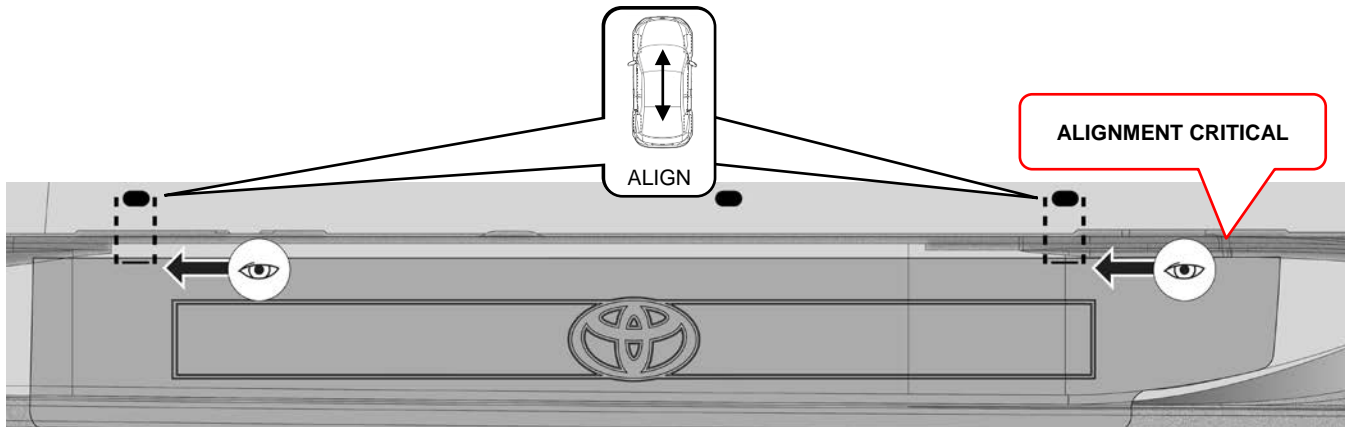


10

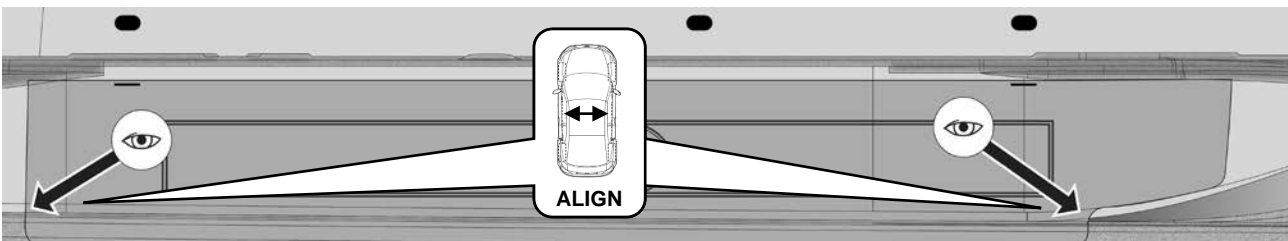

11

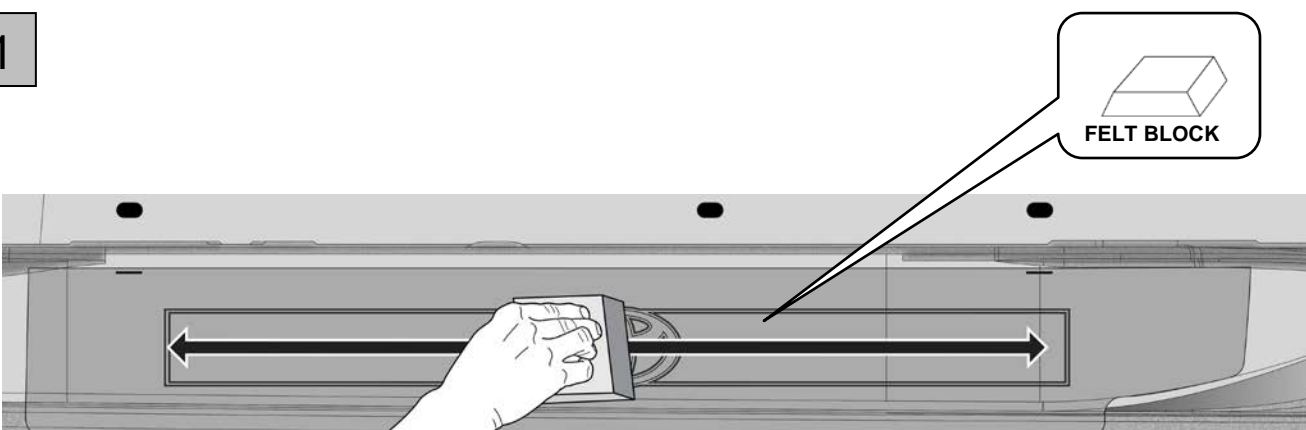


12

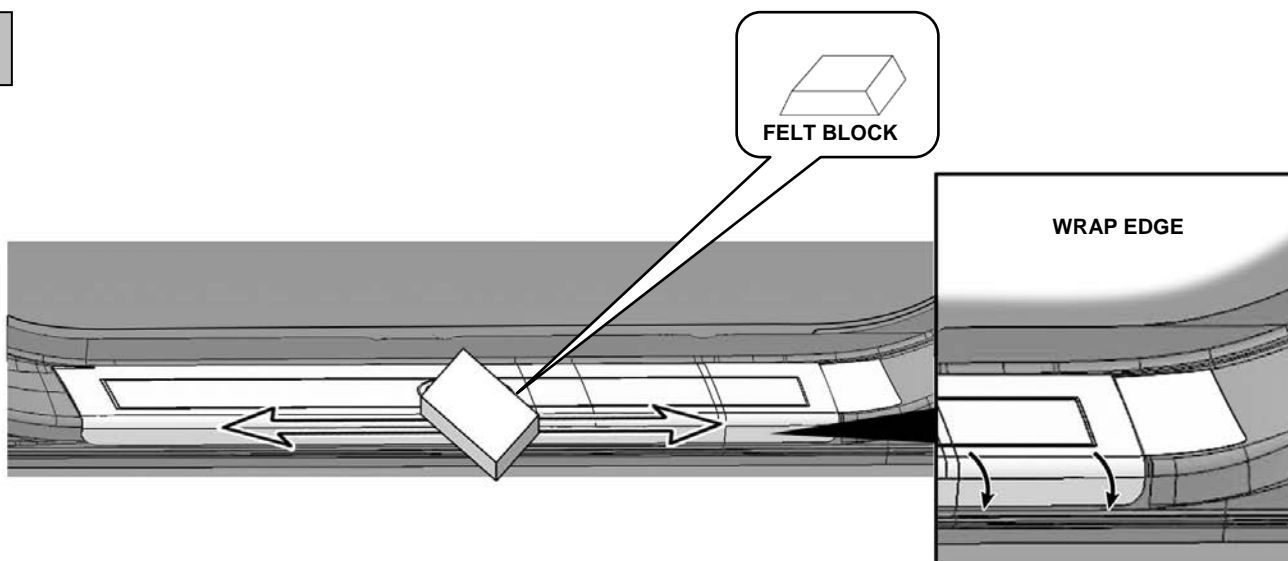

**⚠ Note:** Repeat Steps 1-12 for LH Parts.

# TOYOTA TACOMA-C CAB 2020 - DOOR SILL PROTECTORS

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:	Look For:
<u>Accessory Function Checks</u>  <input type="checkbox"/> Proper adhesion – Visual  <input type="checkbox"/> Proper adhesion – Physical  <input type="checkbox"/> Proper alignment – Cross-Car	  Look for bubbles, loose and lifting edges.  With light pressure rub hand over top of part and if crackling sound occurs, re-squeegee. If bubbles cannot be worked out to the nearest edge, replace part.  Parts must wrap evenly over the vertical surface. Applique must not be installed on inboard curvature.
<u>Vehicle Appearance Check</u>  <input type="checkbox"/> After accessory installation and removal of protective cover(s), perform a visual inspection.	  Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)